


講桌電腦
投影機
無線麥克風



狀況一：E化講桌無法開機

1. 講桌系統是否已開啓
2. 檢查牆壁上插頭是否有被拔除

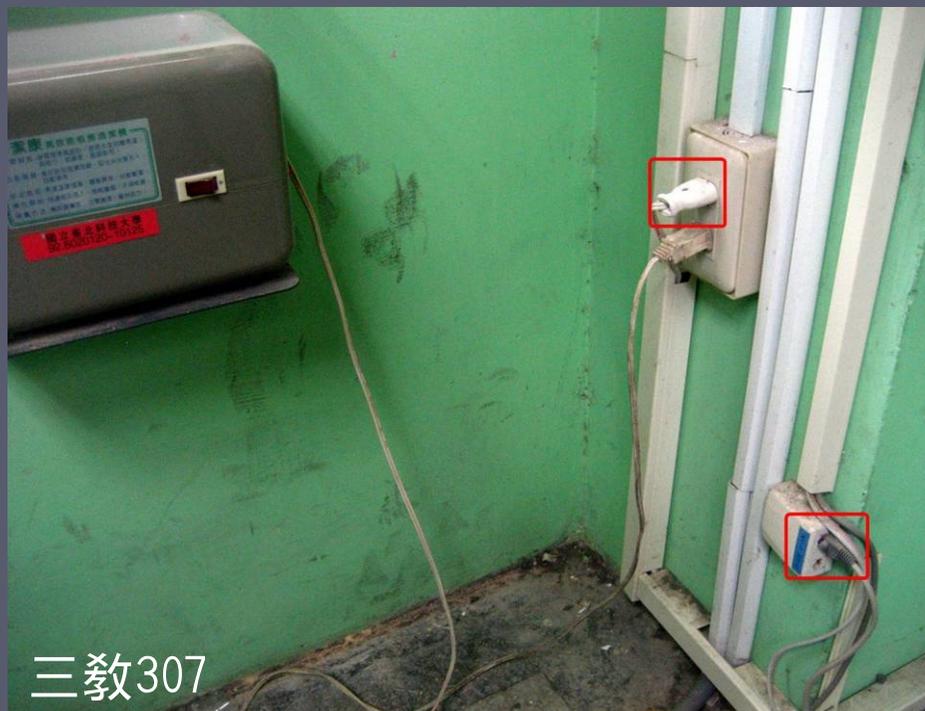

講桌電腦
→
投影機
無線麥克風

狀況一：E化講桌無法開機

3. 檢查開機時，是否插上USB裝置

A problem has been detected and windows has been shut down to prevent damage to your computer.

The problem seems to be caused by the following file: SPCMDCON.SYS

PAGE_FAULT_IN_NONPAGED_AREA

If this is the first time you've seen this Stop error screen, restart your computer. If this screen appears again, follow these steps:

Check to make sure any new hardware or software is properly installed. If this is a new installation, ask your hardware or software manufacturer for any windows updates you might need.

If problems continue, disable or remove any newly installed hardware or software. Disable BIOS memory options such as caching or shadowing. If you need to use safe Mode to remove or disable components, restart your computer, press F8 to select Advanced Startup Options, and then select safe Mode.

Technical information:

*** STOP: 0x00000050 (0xFD3094C2, 0x00000001, 0xFBFE7617, 0x00000000)

*** SPCMDCON.SYS - Address FBFE7617 base at FBFE5000, DateStamp 3d6dd67c


移除USB裝置後重新開機

講桌電腦
→
投影機
無線麥克風

狀況二：E化講桌當機

按 **1** 3秒
→ 強制關閉電源

短壓 **2**
→ 強制重新開機

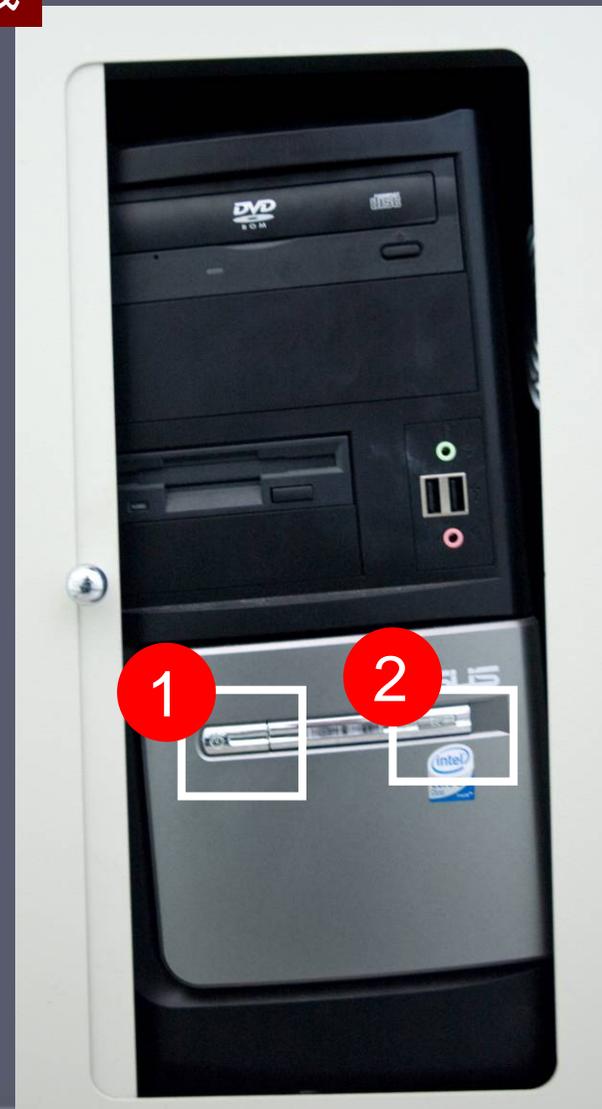

講桌電腦
→
投影機
無線麥克風

狀況三：USB裝置無法使用

外接面板插入USB裝置後
→ 出現無法辨識裝置

請將USB裝置接置前置面板處



講桌電腦
投影機
無線麥克風



狀況四：講桌電腦網路不通

1. 檢查牆壁上插頭是否有被拔除
2. Ping 電腦IP的網段 (140.124.X.254) 是否正常



六教624



四教302

講桌電腦
投影機
無線麥克風



狀況一：投影機沒有畫面

1. 檢查投影機電源
2. 檢查投影機是否已處於開機狀態。



四教303



Power → 綠色：開機
紅色：關機

status → 閃綠色：暖機或散熱中
綠色：狀態正常

講桌電腦
投影機

無線麥克風 →

狀況一：無法對頻

1. 檢查無線麥克風是否有充足電力



推到ON → 閃一下（正常）
沒有閃（沒電）
閃爍（頻段錯誤）
一直亮（快要沒電，需充電）

1. 請撥打分機3215、3216
2. 線上報修（學校首頁>熱門連結>故障登入）

<http://140.124.3.99:8888/WebSite2/report.aspx>

DESK

有任何有關e化講桌需要協助的地方
歡迎與我們聯繫

校內分機：3215、3216
計算機與網路中心行政組辦公室
（共同科館一樓）